

# IHANNE

Asennusohje  
V.14A

**INNOLUX**  
design Lisa Johansson-Pape

Osat:  
1 x Kupu

Ripustussarjan tarvikkeet:

1 x Valaisinjohto 

1 x Valaisinpistotulppajohto 


1 x Messingin värinen kartiokuppi 

1 x Kattokuppi 


1 x Ripustuskoukku 

1 x Musta tiiviste, riviliitin 


1 x Ruuvimeisseli 

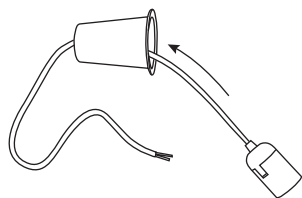


1 Pujota valaisinjohto kartiokupin läpi.

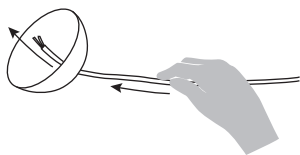

3 Pujota valaisinjohto kattokupin läpi.

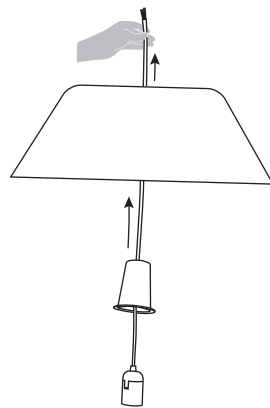


2 Pujota valaisinjohto kuvun läpi alakautta.

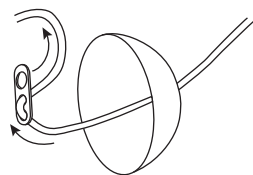

4 Pujota ripustuskoukku valaisinjohtoon.


**INNOLUX**  
Home of good light.

**A** Kattopistorasia:

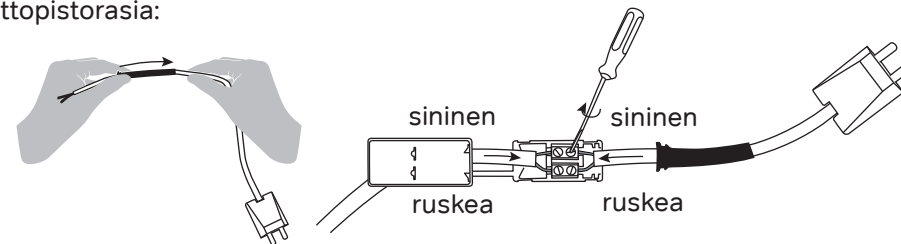


5 Pujota valaisinpistotulpan johto mustan tiivistein läpi.

6 Avaa riviliittimen ruuvit, pujota molempien johtojen päät paikoilleen riviliittimeen ja kiristä ruuvit.

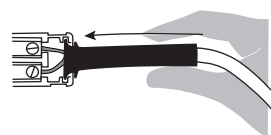


7 Siirrä musta tiiviste paikalleen.

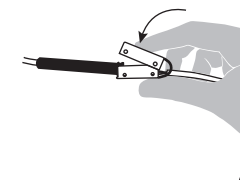


8 Napsauta kansi kiinni, varmista että kaikki neljä hakasta kiinnittyvät.


**B** Ei kattopistorasiaa:

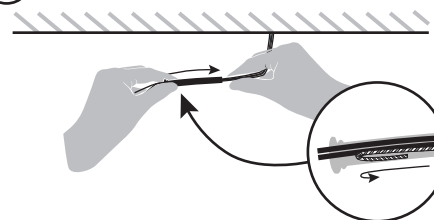


5 Taita keltavihreä katosta tuleva johto kaksinkerroin ja pujota kaikki katosta tulevat johtimet tiivistein läpi.

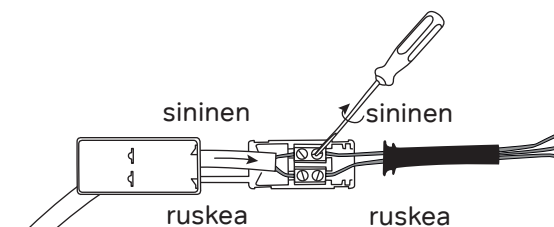

6 Avaa riviliittimen ruuvit, pujota valaisinjohtoon sekä katosta tulevien johtimien päät riviliittimeen ja kiristä ruuvit.




7 Siirrä musta tiiviste paikalleen.

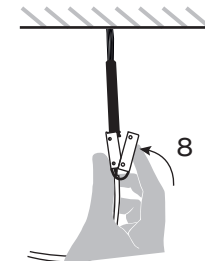


8 Napsauta kansi kiinni, varmista että kaikki neljä hakasta kiinnittyvät.

A Kattopistorasia:


1

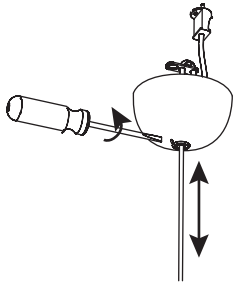


2

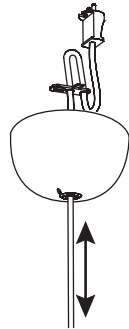

3

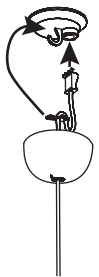


4

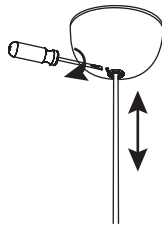


B Ei kattopistorasiaa:


1

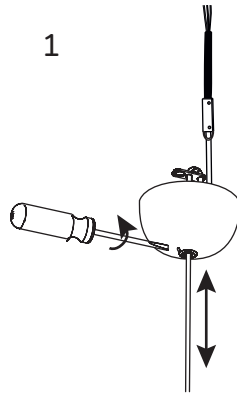


2

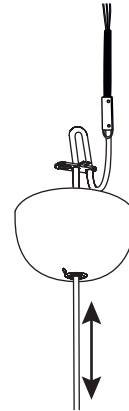

3



4

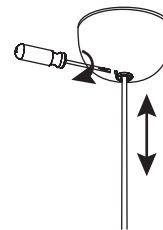

# IHANNE

Installation instructions  
V.14A




## Parts:

1 x Lampshade

## Suspension set supplies:

1 x Cord 

1 x Ceiling plug cord 


1 x Brass cone-shaped cup 

1 x Ceiling-rose 


1 x Cord-strain 

1 x Rubber sleeve, two poles terminal block 


1 x Screwdriver 

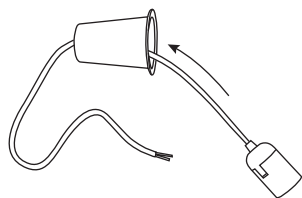


1 Thread the cord through the cone-shaped cup.

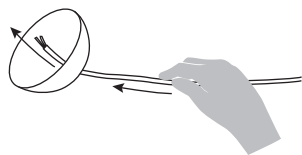

3 Thread the cord through the ceiling-rose.

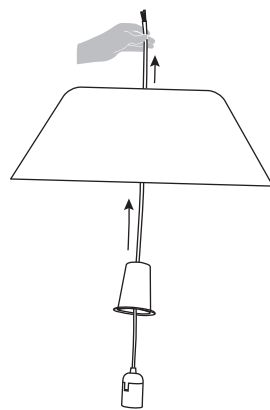


2 Thread the cord through the lampshade from underneath.

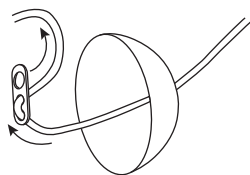

4 Insert cord-strain to the cord.




## A Roof socket:

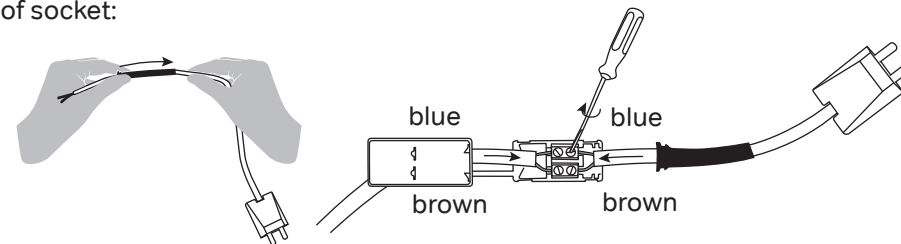


5 Insert the ceiling plug cord through the rubber sleeve.

6 Open the screws of two poles terminal block, insert the ends of the cords in their places and tighten the screws firmly.

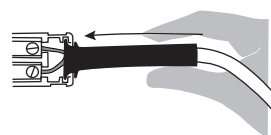


7 Move the rubber sleeve to its place.

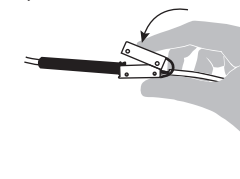


8 Close the cover so that all four staples click.


## B No roof socket:

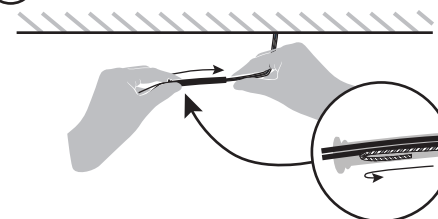


5 Fold the yellowgreen ceiling wire and insert all the ceiling wires through the rubber sleeve.

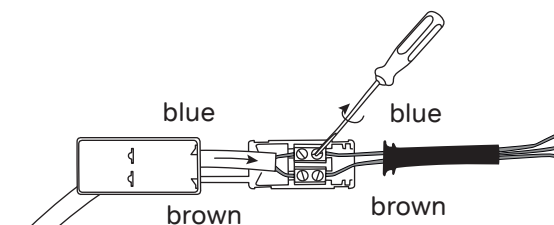

6 Open the screws of two poles terminal block, insert the ends of the cord and the ceiling wires (not the yellowgreen wire) in their places and tighten the screws firmly.




7 Move the rubber sleeve to its place.

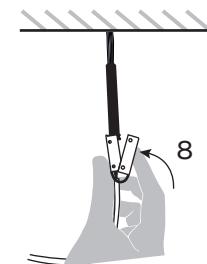


8 Close the cover so that all four staples click.

(A) Roof socket:


1

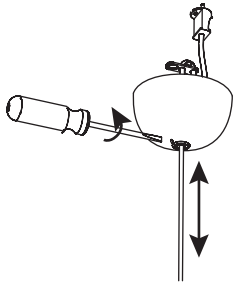


2

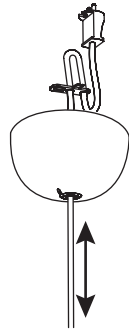

3

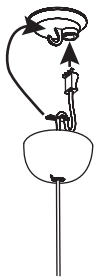


4

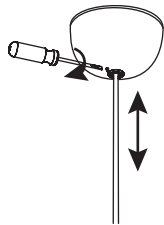


(B) No roof socket:

1

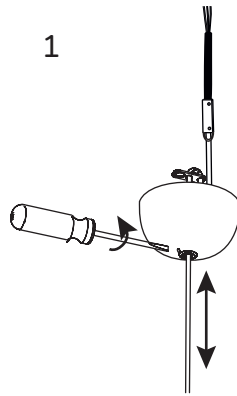

2

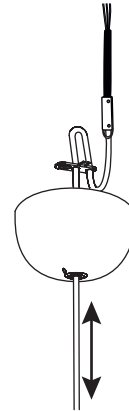

3



4

